




Nexus One Motherboards Replacement

This guide is for installing the upper and lower motherboards on the Nexus One.

Written By: Niklas Johnson

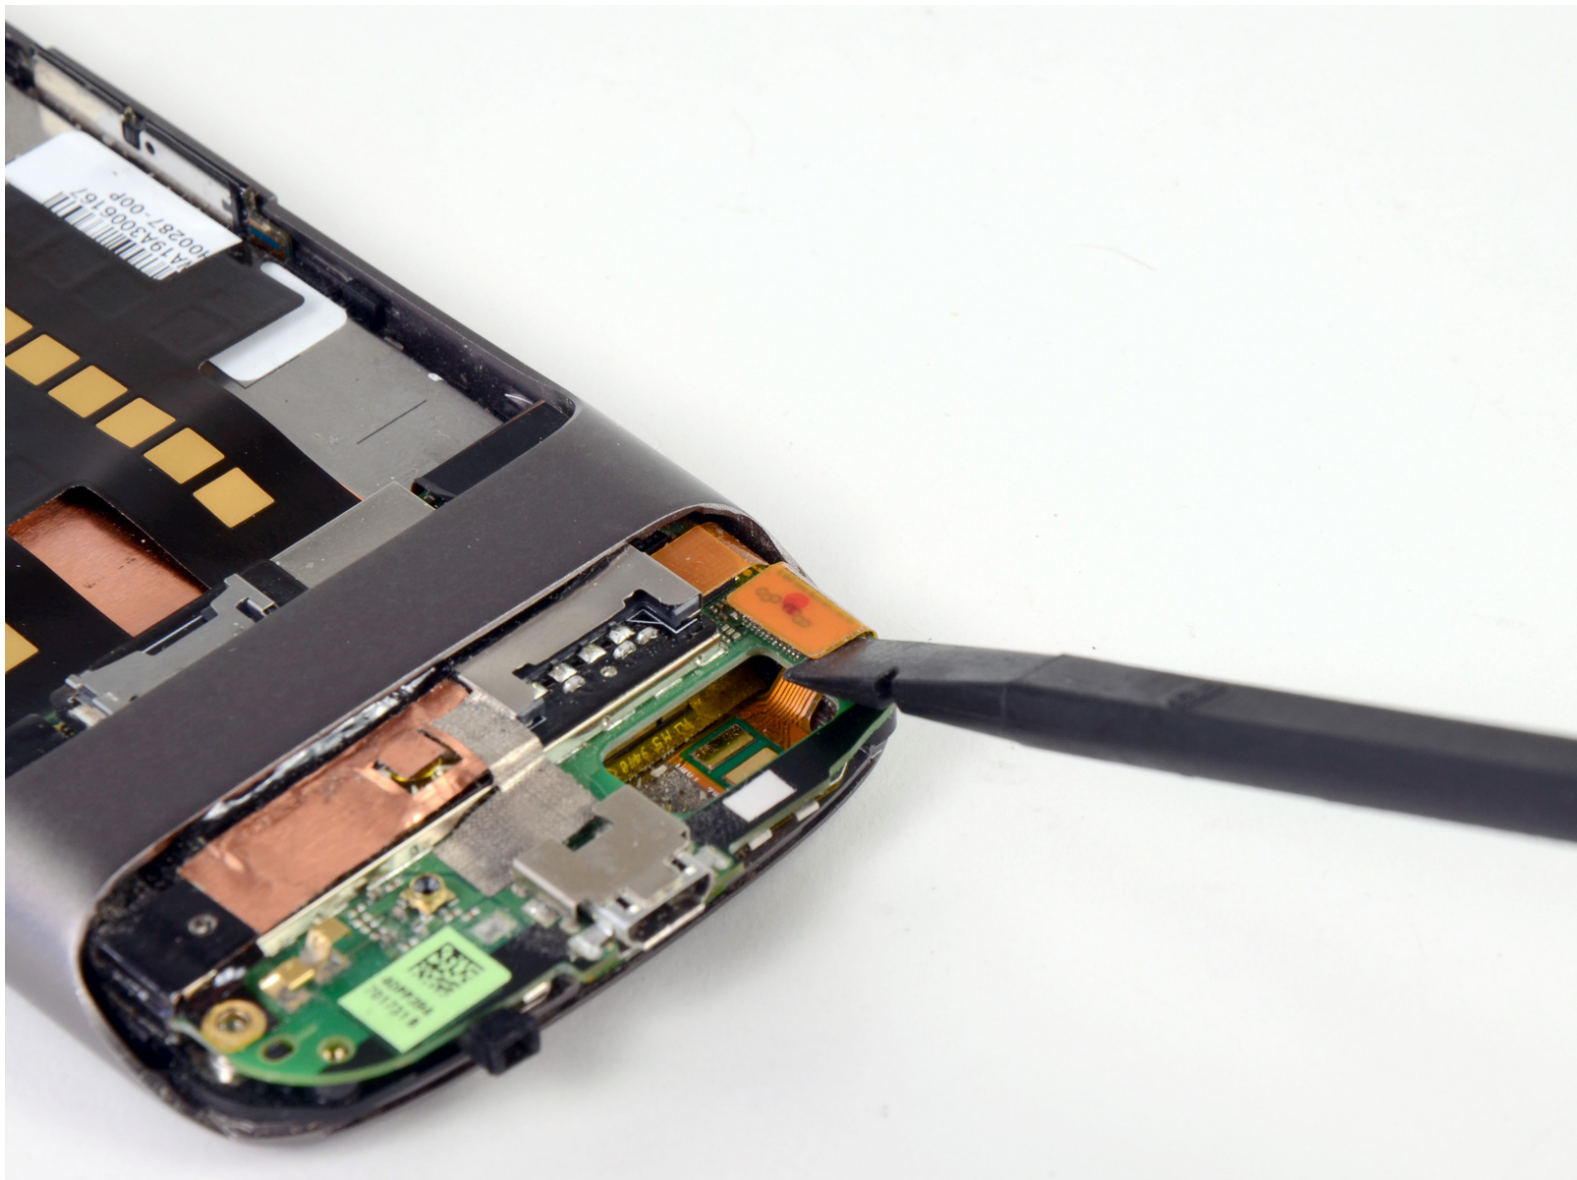



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
 - [T5 Torx Screwdriver](#) (1)
-

Step 1 — Rear Cover



- Using two fingers, push up on the rear cover.

Step 2



- The rear cover slides up and off.

Step 3 — Battery



- Using the plastic opening tools, pry the left bottom corner of the battery up.

Step 4



- Pull the battery up and out.

Step 5 — Battery Housing



- Remove the two Torx T5 screws.
- Remove the one Philips #00 screw.

Step 6



- Using the plastic opening tool, pry up the battery housing upwards.
- Push pry tool down, undoing the plastic tab.

Step 7



- Pry the upper left tab open on the battery housing.

Step 8




- Pry the top tab of the battery housing.

Step 9





- Pry the right side tab of the battery housing.

Step 10

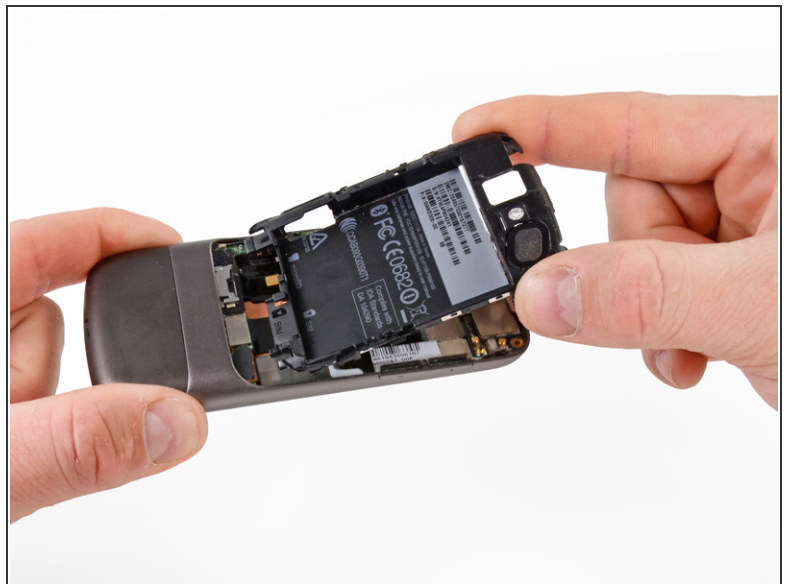


- Pull up on the battery housing.
- Slide the battery housing out to remove it.

Step 11 — Lower Cover

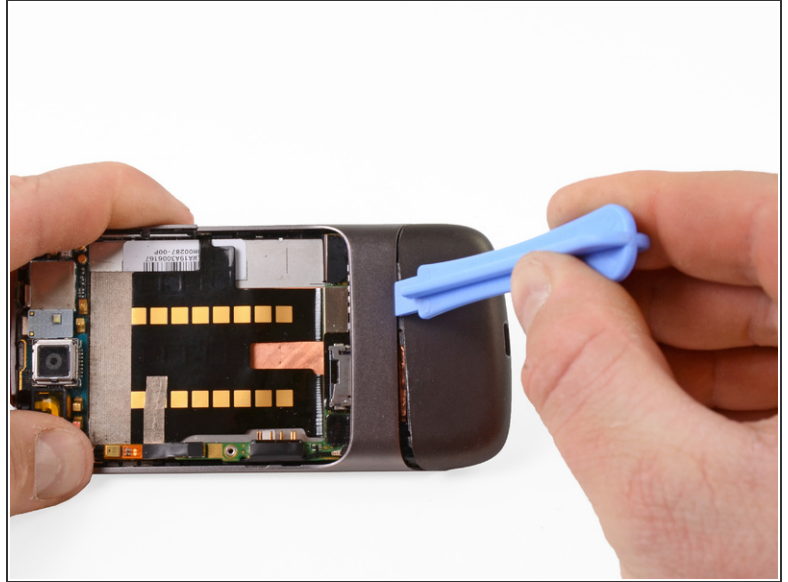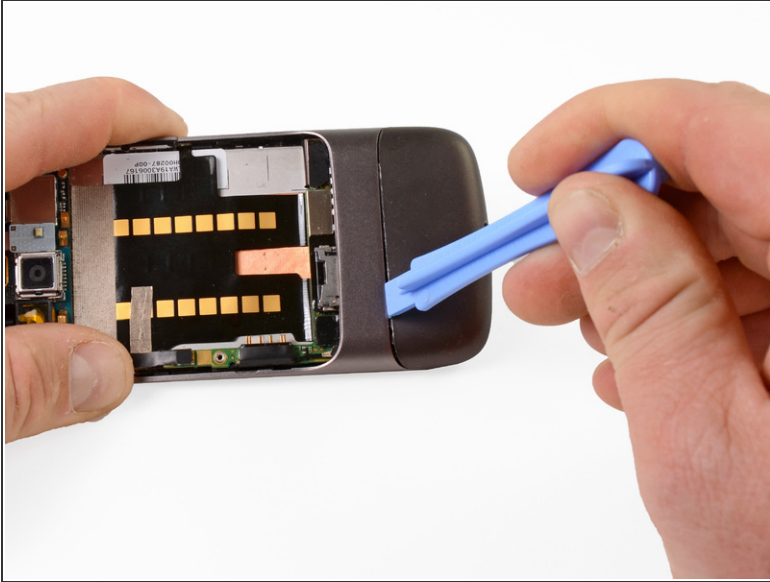



- Using the plastic opening tool, push the blade into the space between the case and lower cover.
- Turn the opening tool slightly, the lower cover will detach on that side.
- Repeat on other side of the seam.
- The lower cover will slide off.

Step 12 — Antenna Housing

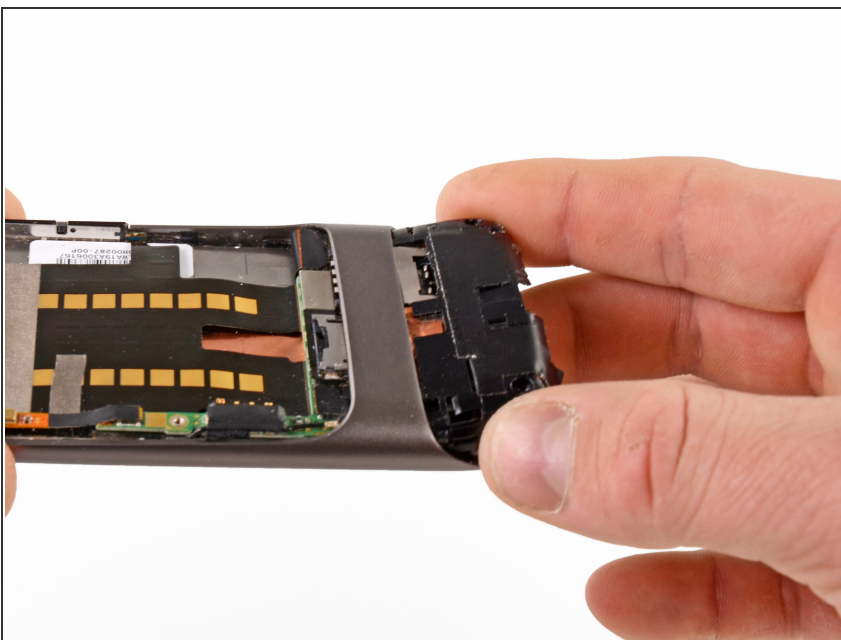


- Remove the one T5 Torx screw
- Remove the one #00 Philips screw
- Lift up the end of the antenna housing and slide it outwards.

Step 13 — Secondary Microphone

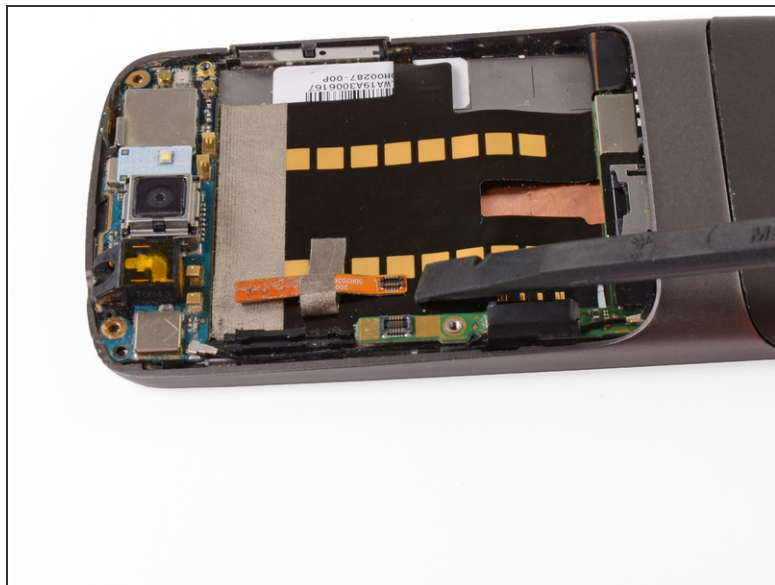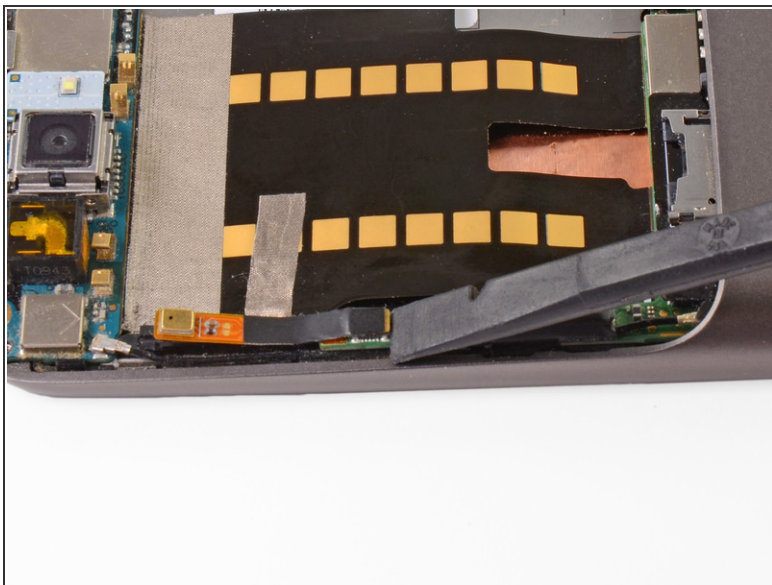



- Using the spudger, pry upwards on the second microphone connector.

Step 14

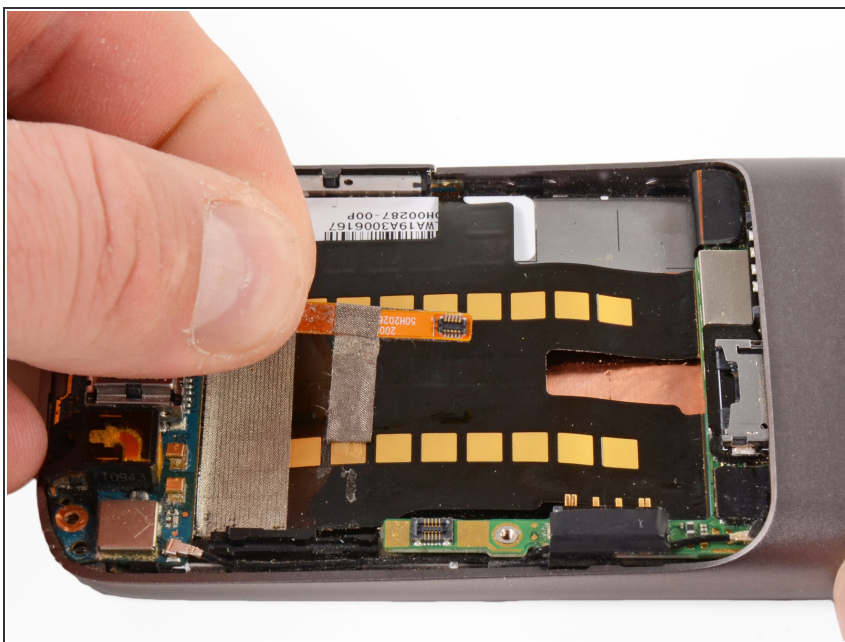




- Pull up on the ribbon cable, the tape will detach from the main board ribbon.

Step 15 — Motherboards

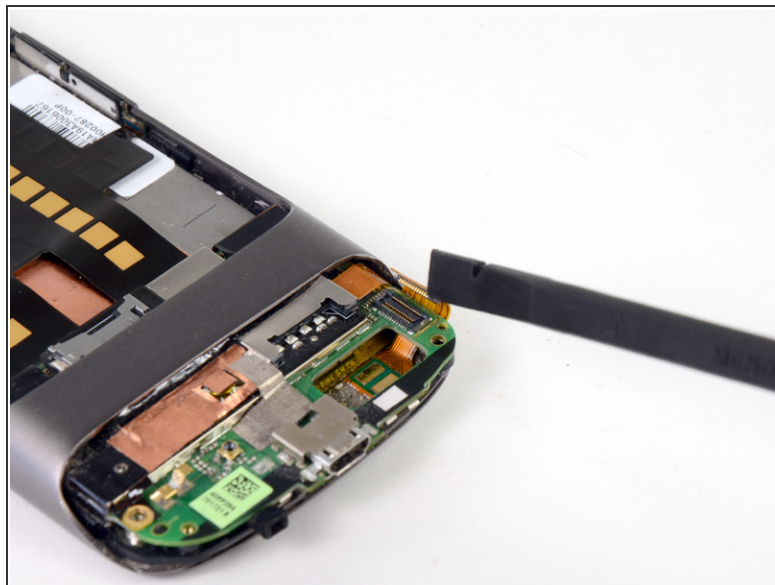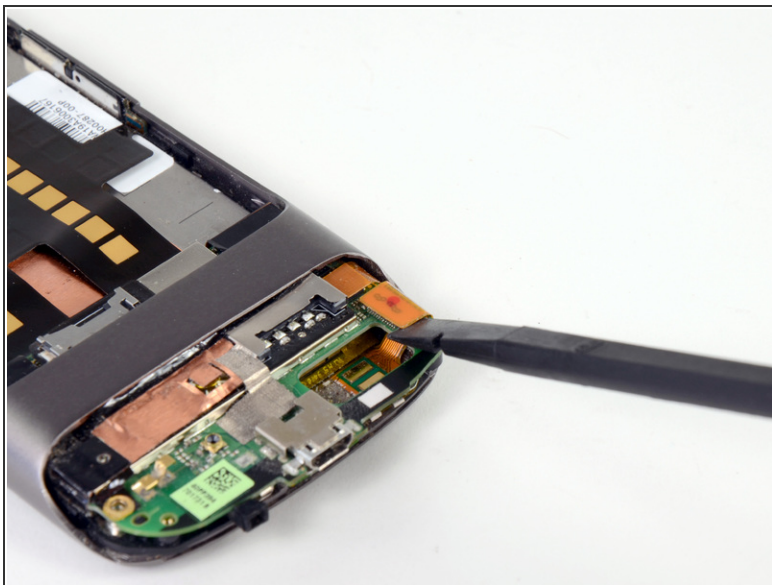


- Insert the spudger under the connector.
- Push the spudger up and twist to release the connector.
- Repeat for the next connector.

Step 16

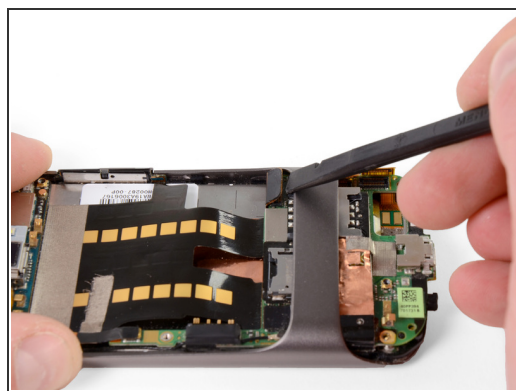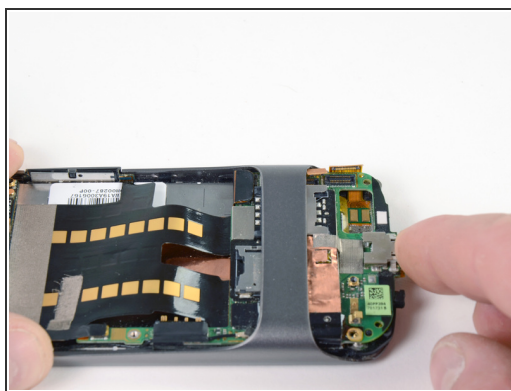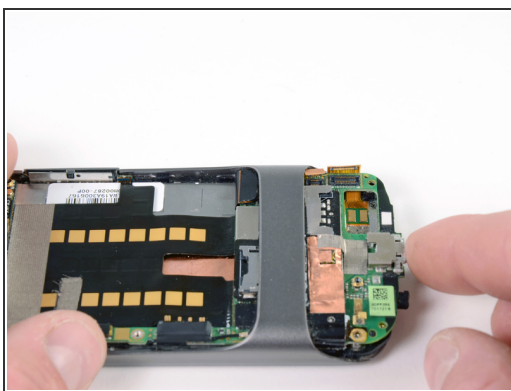


- Push on the USB port to expose the black connector.
- Use the spudger to pry the connector upwards.

Step 17

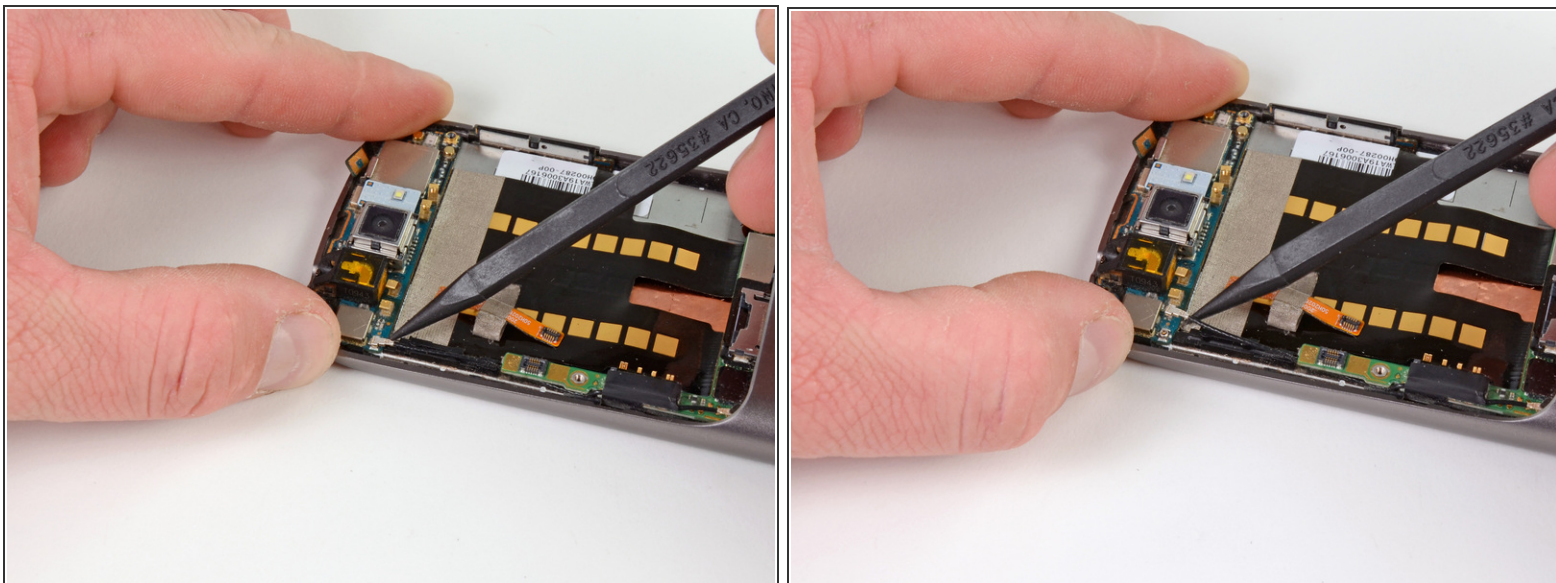


- Place the spudger under the antenna connector.
- Pry connector up vertically.

Step 18

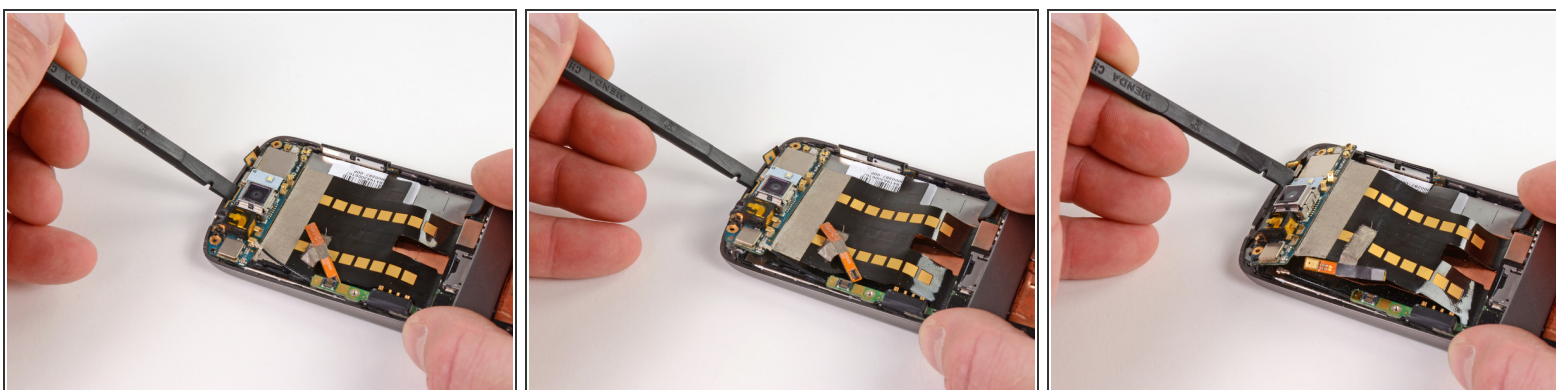

- Insert the spudger into tab above the camera.
- Slide upwards until the board detaches from the case.


Step 19

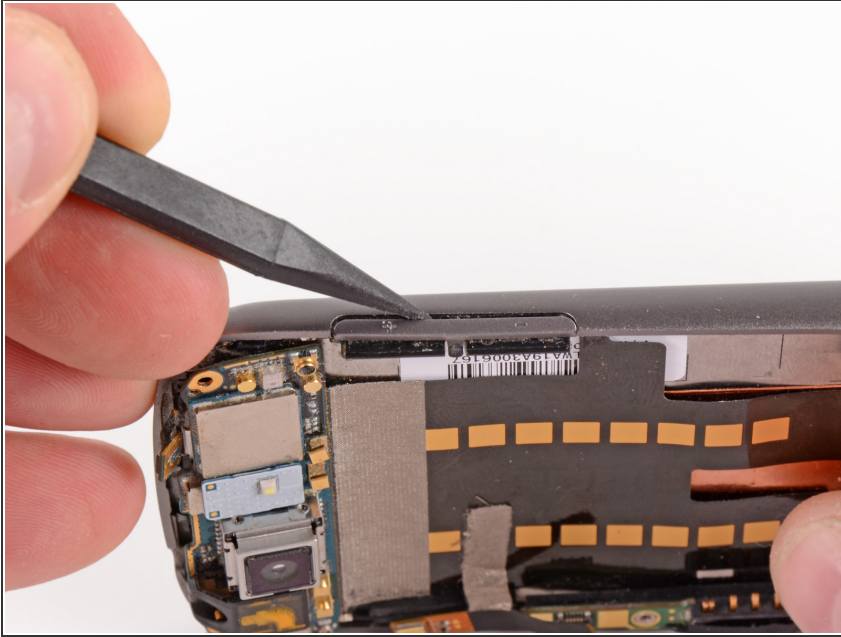

- Press the pointed tip of the spudger into the space below the button assembly.
- Wiggle the spudger tip towards the outside of the button.


⚠ The button assembly is under some tension and may fly off.

Step 20

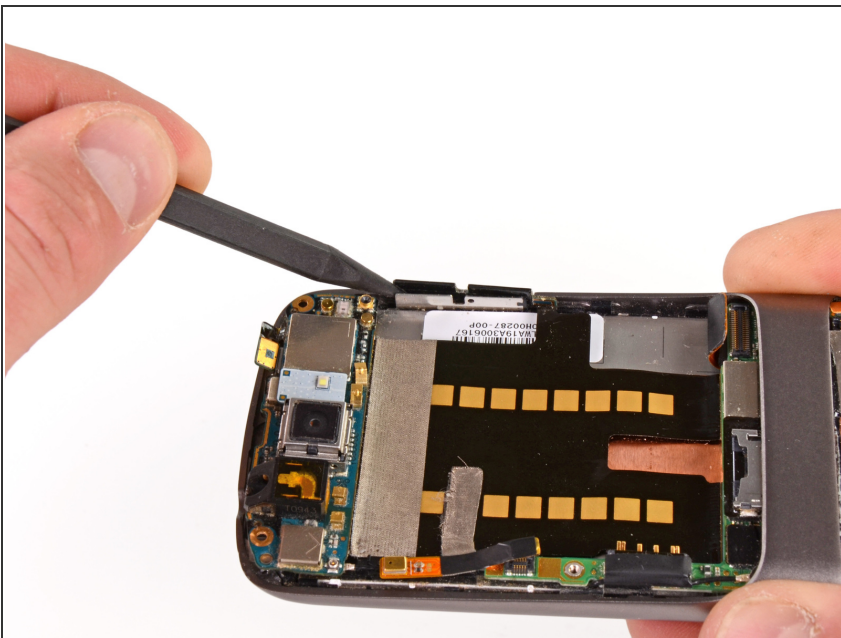

- Push the pointed tip of the spudger into the base of the side button board.
- Lift up, the board will disconnect from the case.

Step 21

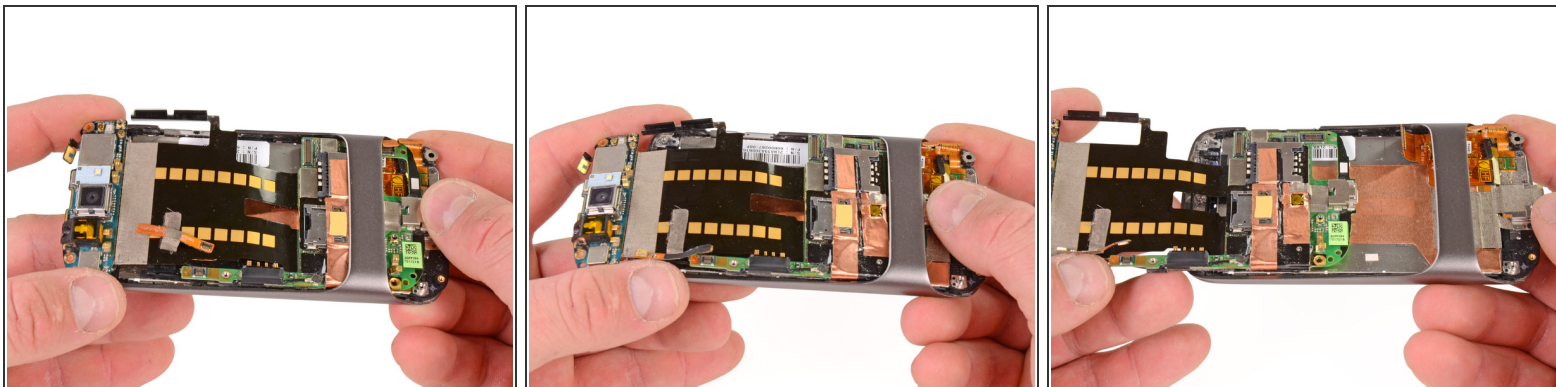

- Push on the lower motherboard until it slides under the case support.
- The motherboard assembly comes out as a single piece.
- Save the small black rubber rectangular sound guide under the motherboard, to replace over the microphone.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-28 03:33:02 AM.